

MONTERINGSANVISNING



Icopal Ställbar Rännkrok



B	X
0	-
7	80
14	40
18	30
22	25
27	20
38	12,5

1) Ta reda på ungefärlig lutning på taket/takfots-brädan.
(ex. om sträckan X är 40 cm är taklutningen 14°)

2) Ställ in önskad vinkel genom att sticka in låsblecket i rätt spår på kroken.

3) Vik in låsblecket för att låsa kroken i önskad vinkel. Tryck ner blecket ordentligt, vid behov använd lämpligt verktyg. (exempelvis tång).



4) Kontrollera gärna inställd vinkel innan övriga krokarna ställs in. Krokens framkant bör i horisontalplanet ligga cirka 25-30 mm under bakkantens nabb (b).

5) När alla krokarna är inställda på önskad vinkel skruvas de upp med en horisontell lutning av cirka 3 mm per meter mot stupröret.


ASSEMBLY INSTRUCTION




Icopal Adjustable Gutter hook

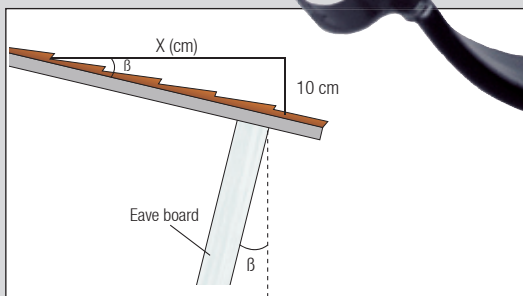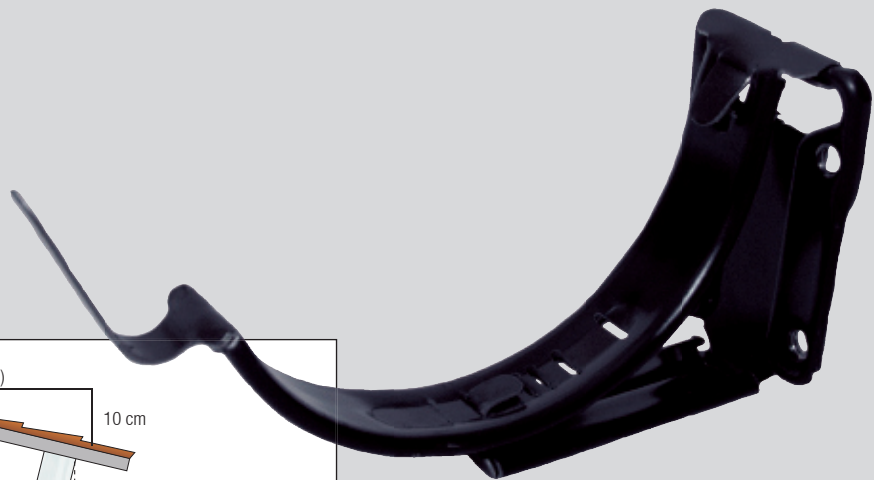


1) Find out the approximate angle of the roof / eave board. (e.g. if section X is 40 cm then the roof slope is 14°)

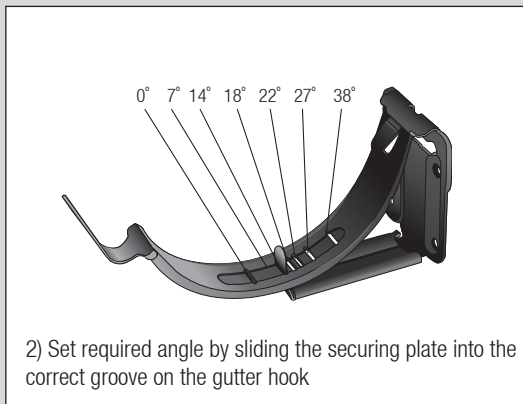


2) Set required angle by sliding the securing plate into the correct groove on the gutter hook

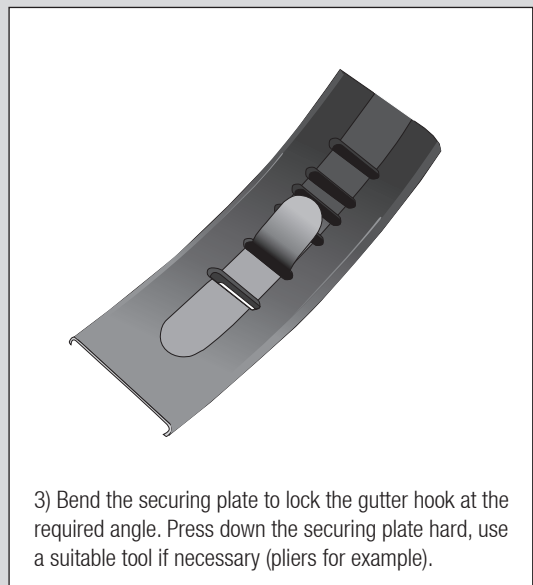

3) Bend the securing plate to lock the gutter hook at the required angle. Press down the securing plate hard, use a suitable tool if necessary (pliers for example).

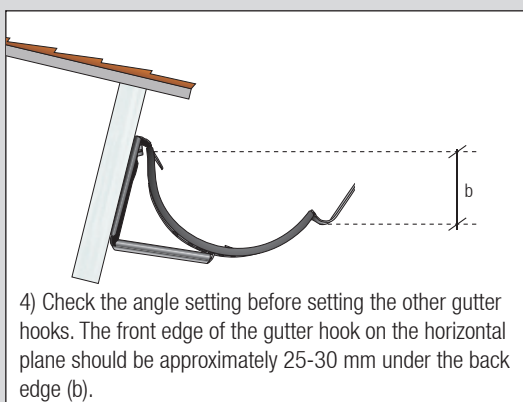

4) Check the angle setting before setting the other gutter hooks. The front edge of the gutter hook on the horizontal plane should be approximately 25-30 mm under the back edge (b).

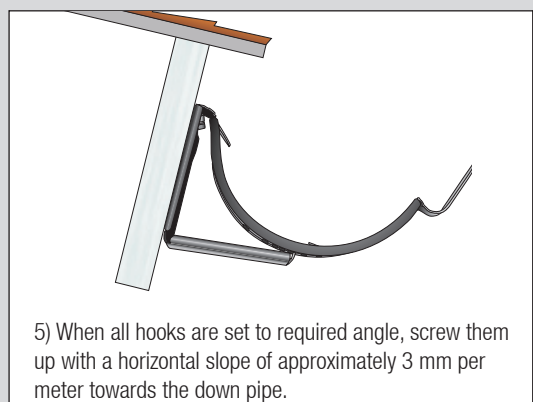

5) When all hooks are set to required angle, screw them up with a horizontal slope of approximately 3 mm per meter towards the down pipe.

